

FIG. 1

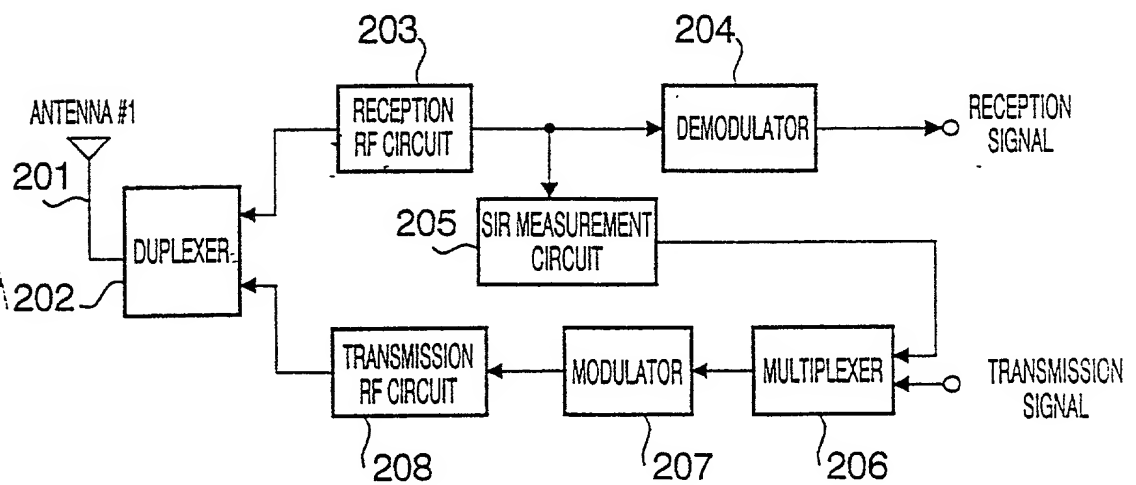


FIG. 2

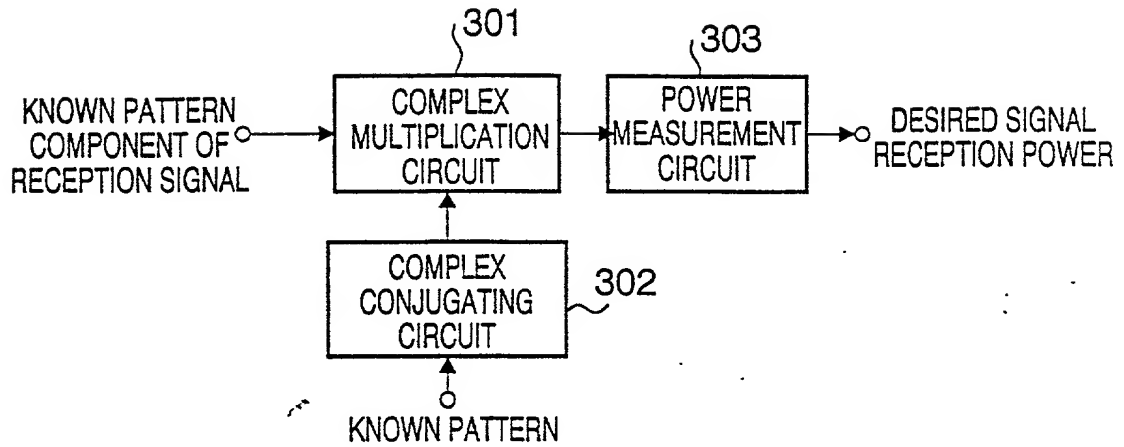


FIG. 3

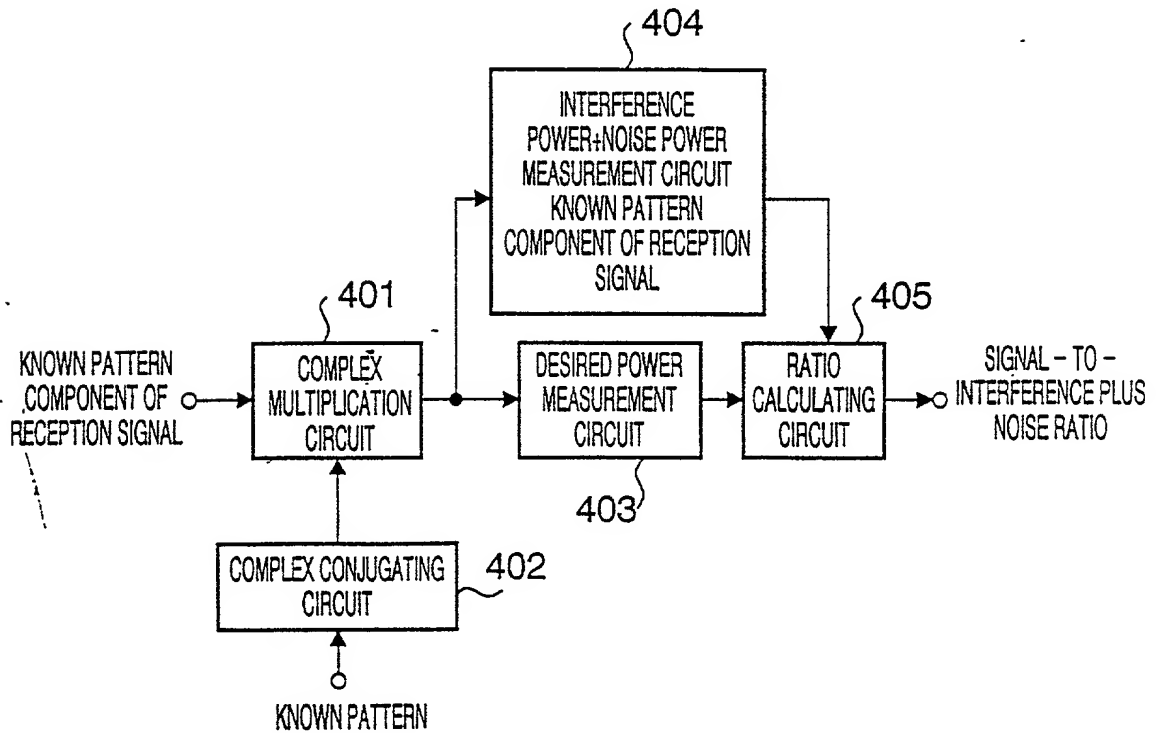


FIG. 4

FIG. 5

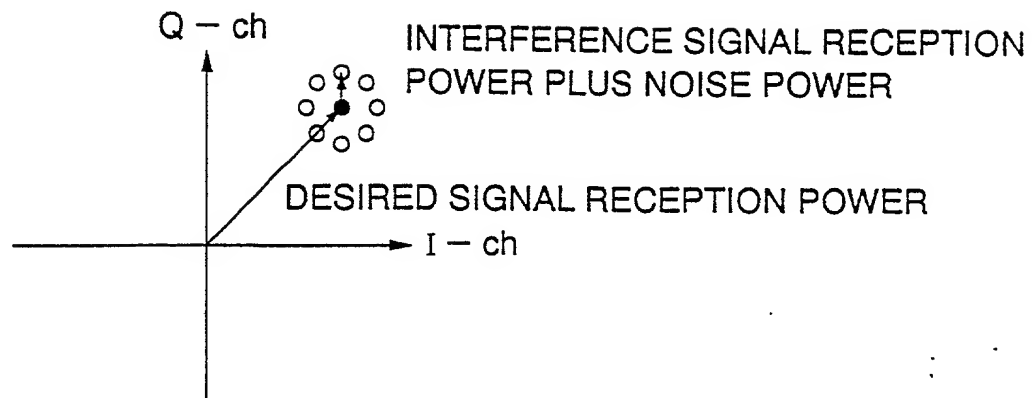


FIG. 6



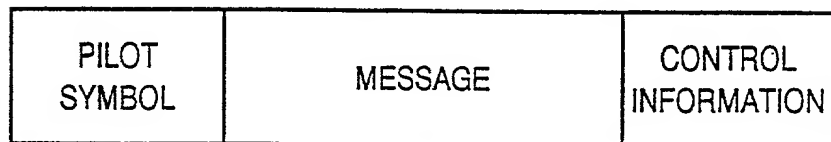


FIG. 7

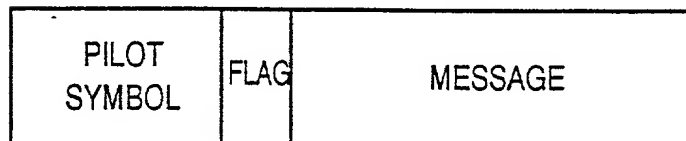


(a) WHEN FLAG = MESSAGE

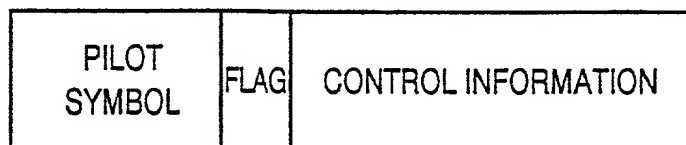

(b) WHEN FLAG = CONTROL INFORMATION

FIG. 9

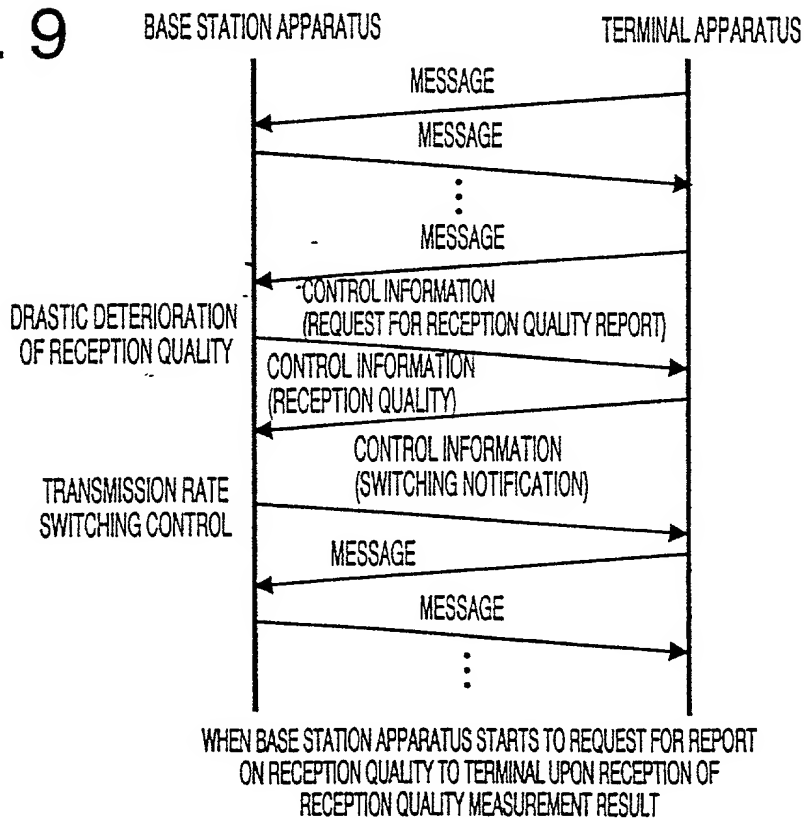

## BASE STATION APPARATUS



## ERROR DETECTION

## BASE STATION APPARATUS



WHEN BASE STATION APPARATUS STARTS TRANSMISSION RATE  
SWITCHING CONTROL BASED ON OWN TRANSMISSION POWER

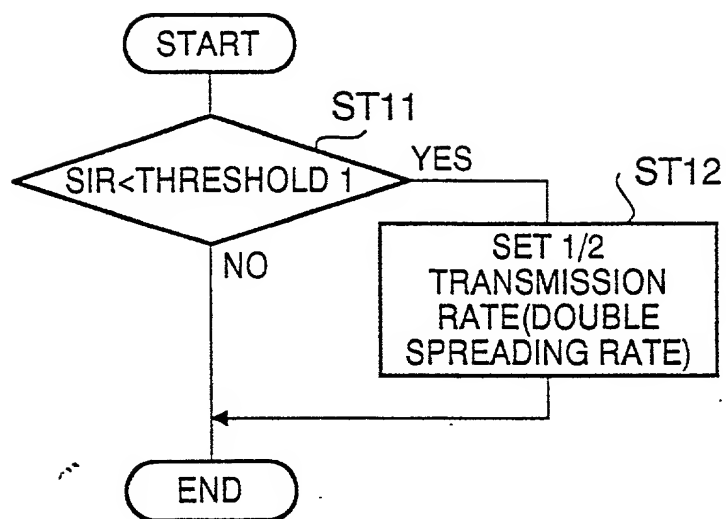


FIG. 12

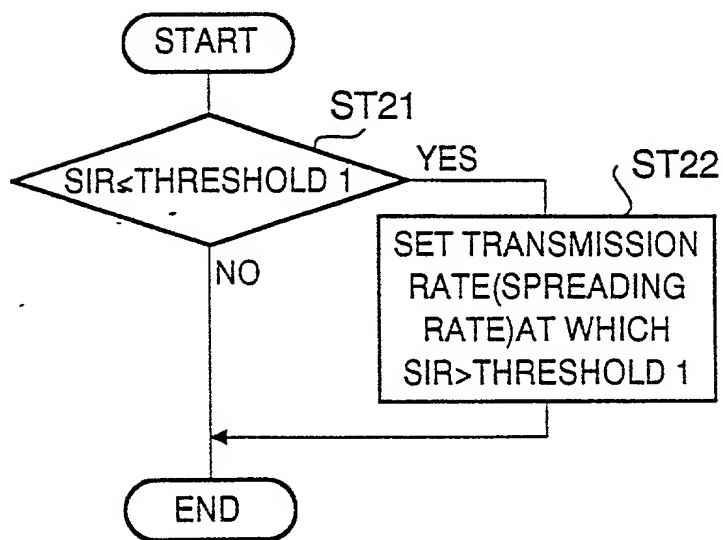


FIG. 13

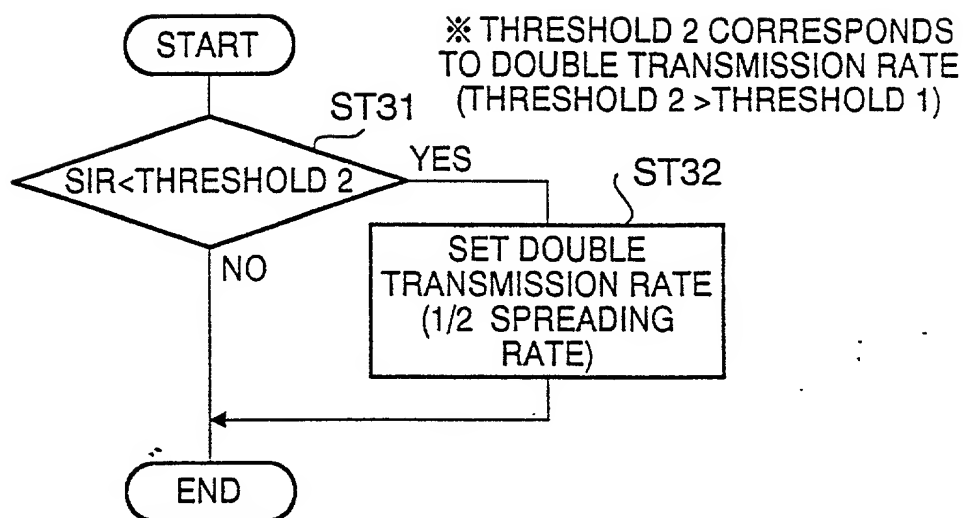


FIG. 14

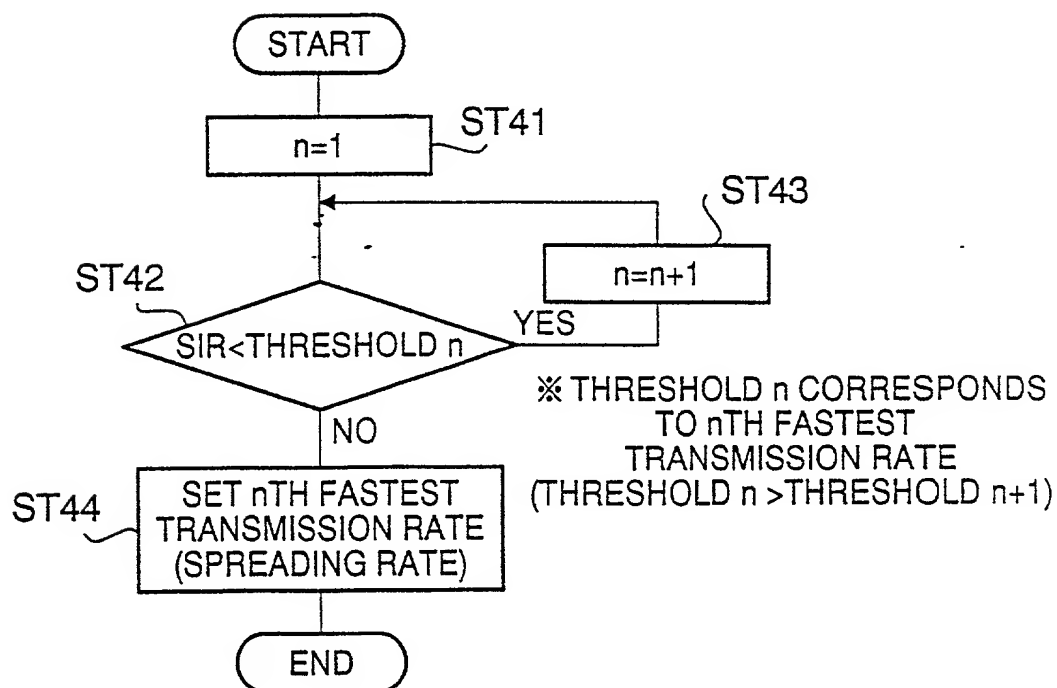


FIG. 15

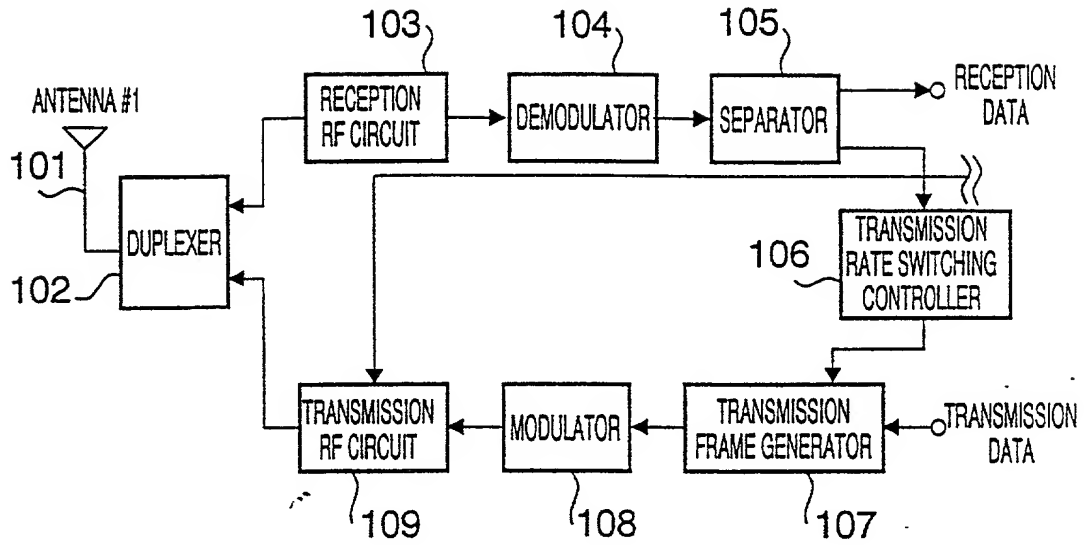


FIG. 16

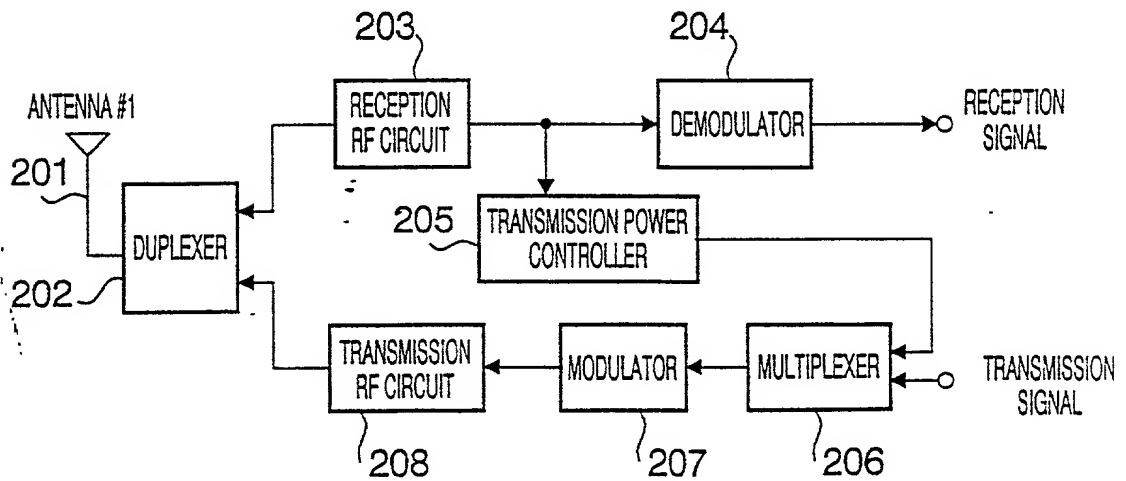


FIG. 17



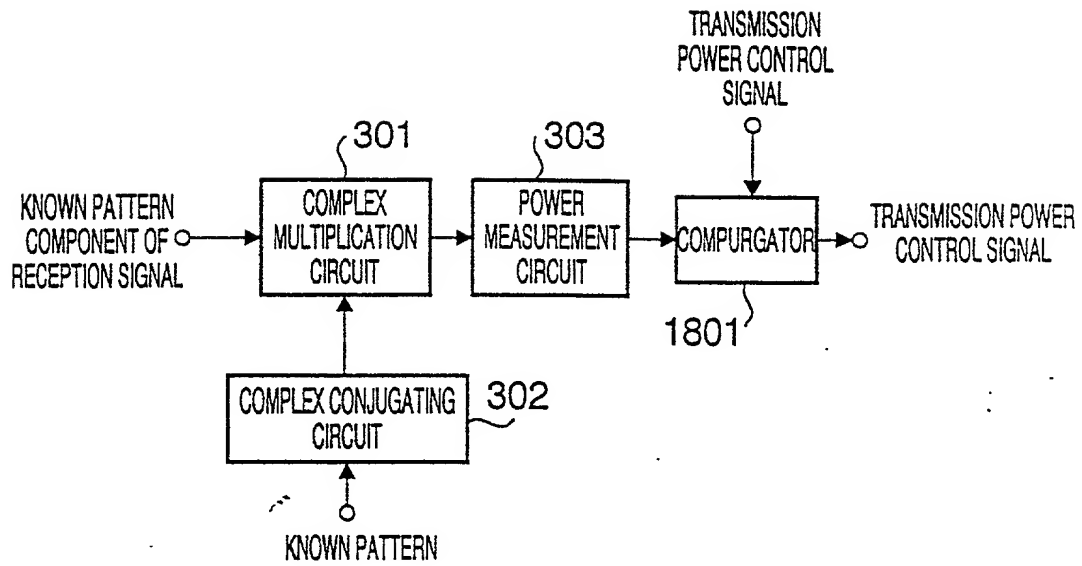


FIG. 18

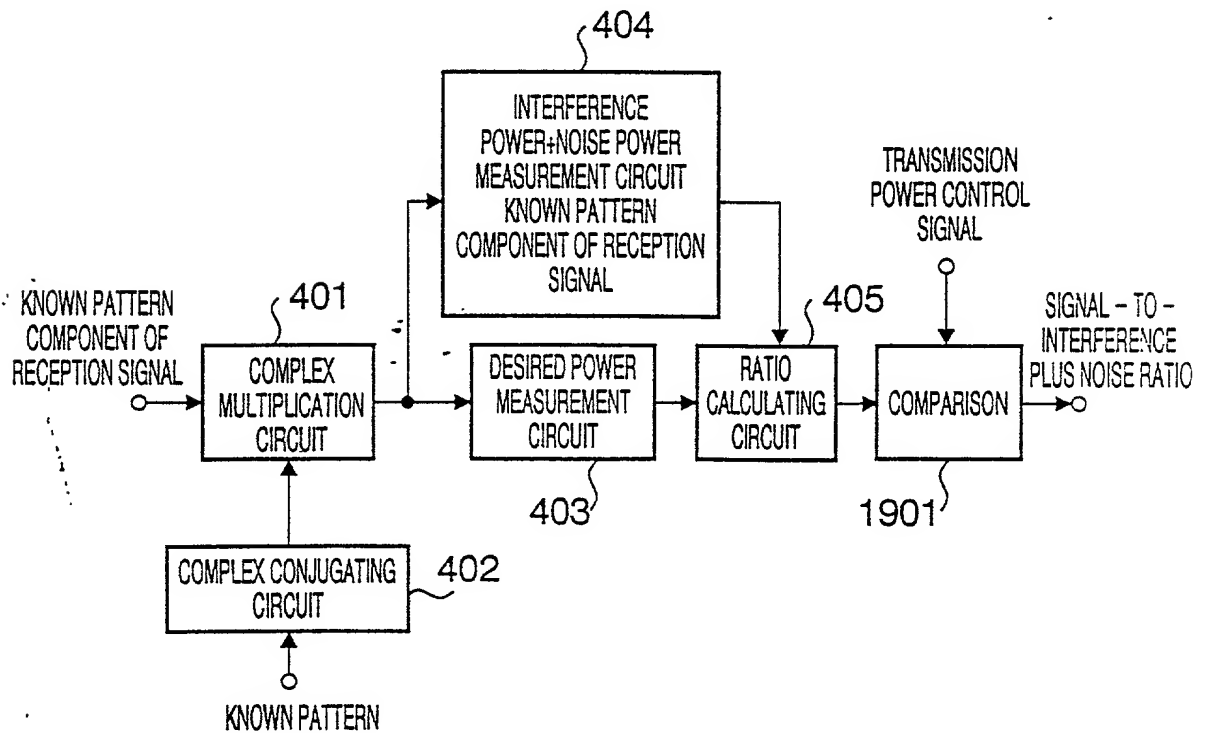


FIG. 19

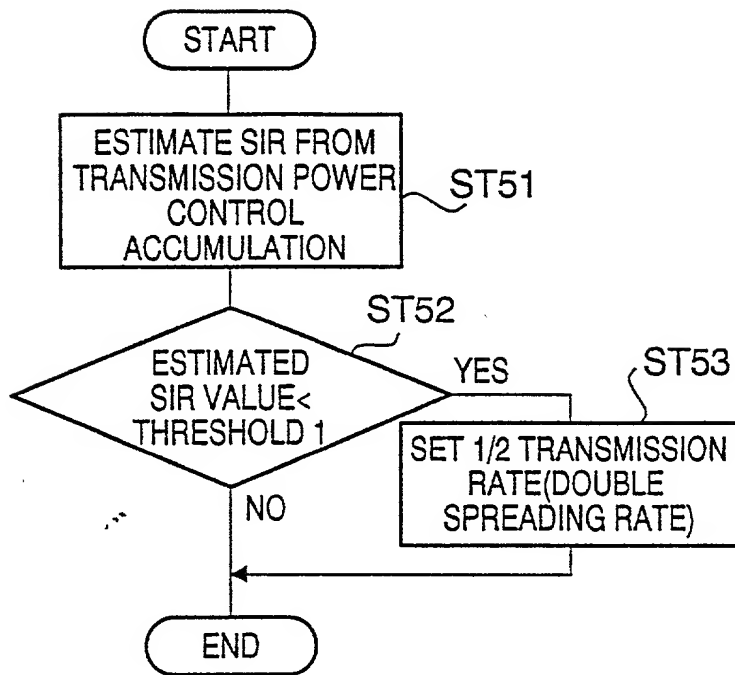


FIG. 20

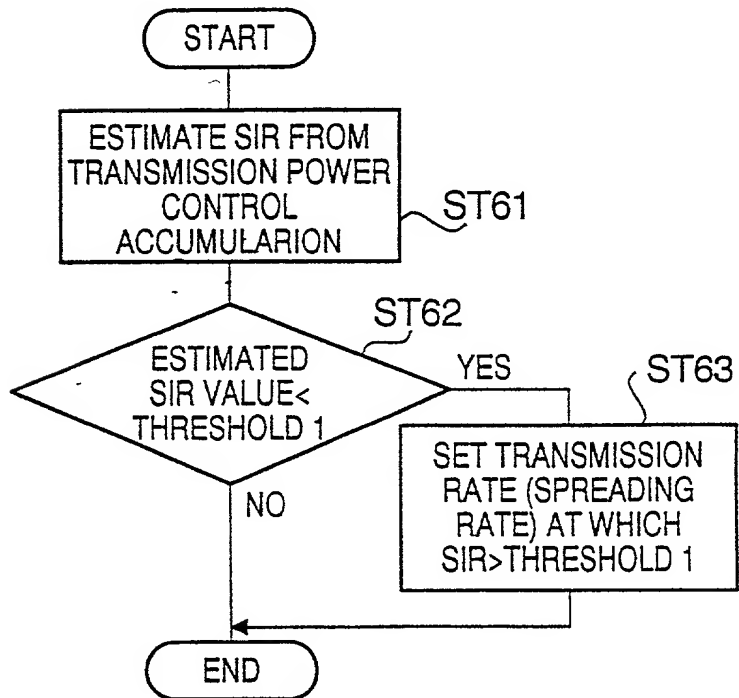


FIG. 21

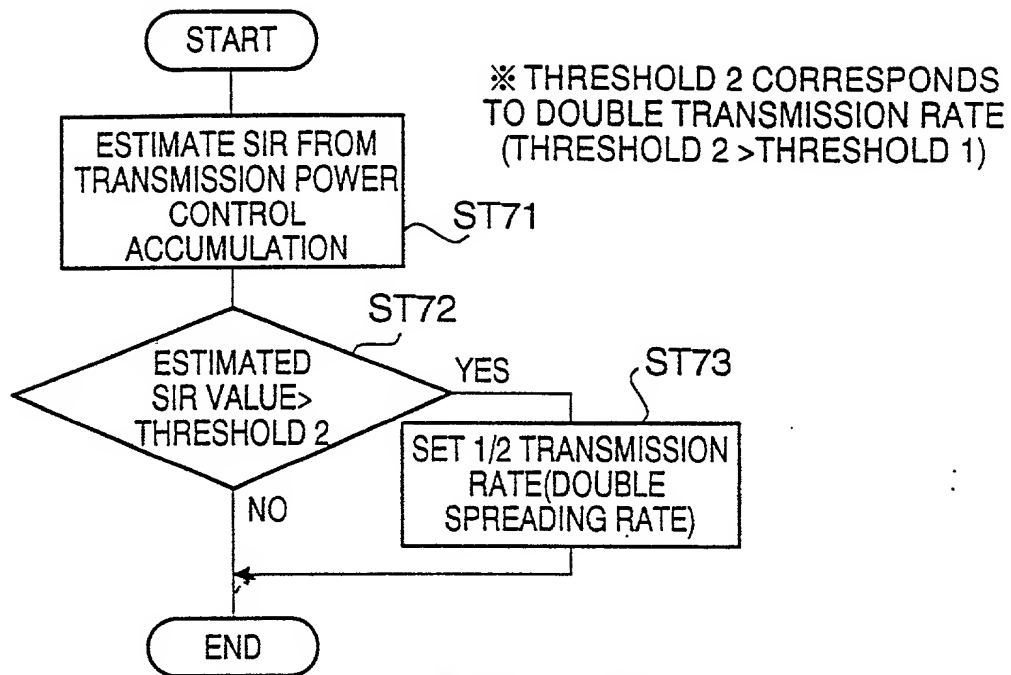


FIG. 22

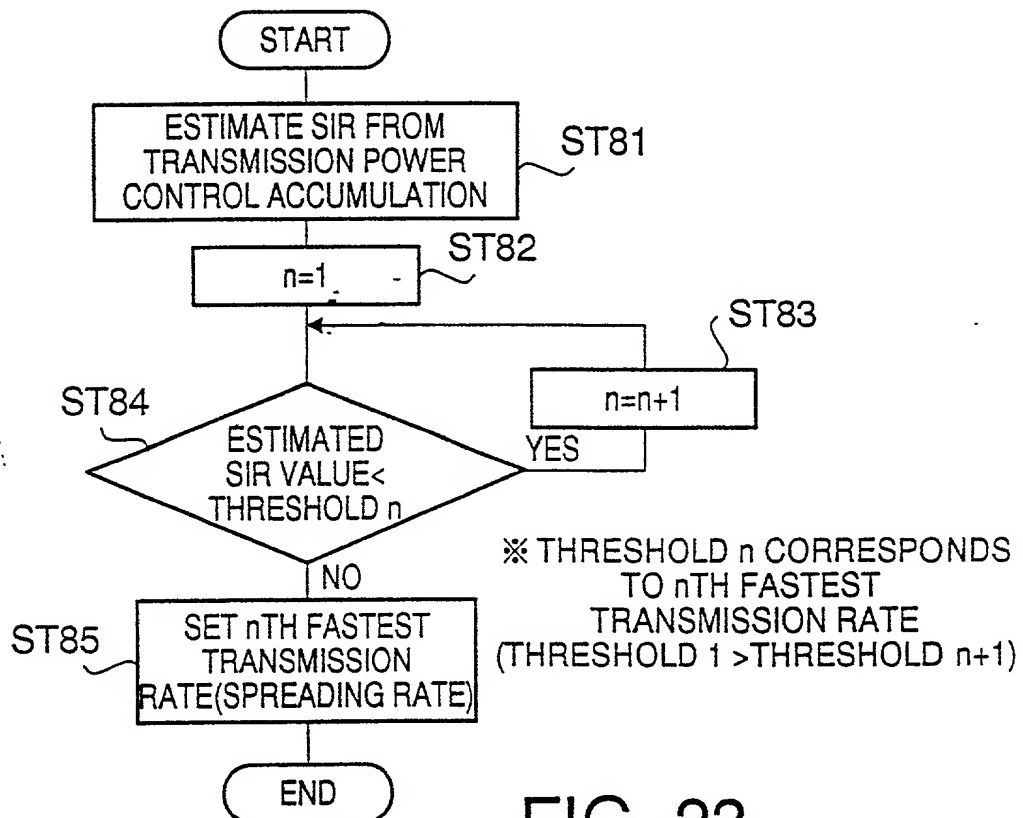


FIG. 23

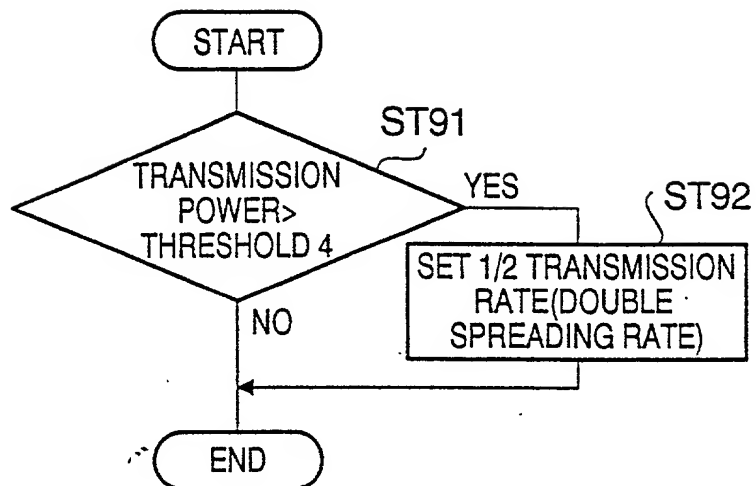


FIG. 24

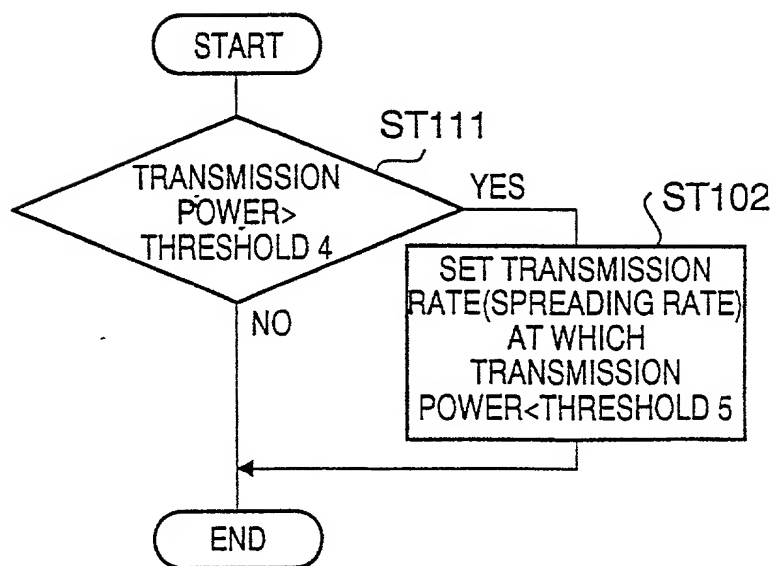


FIG. 25

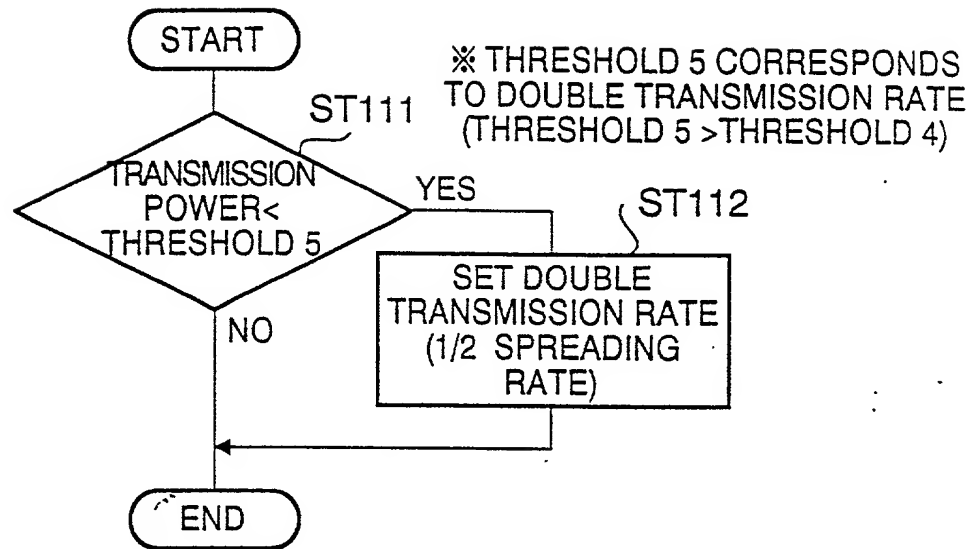


FIG. 26

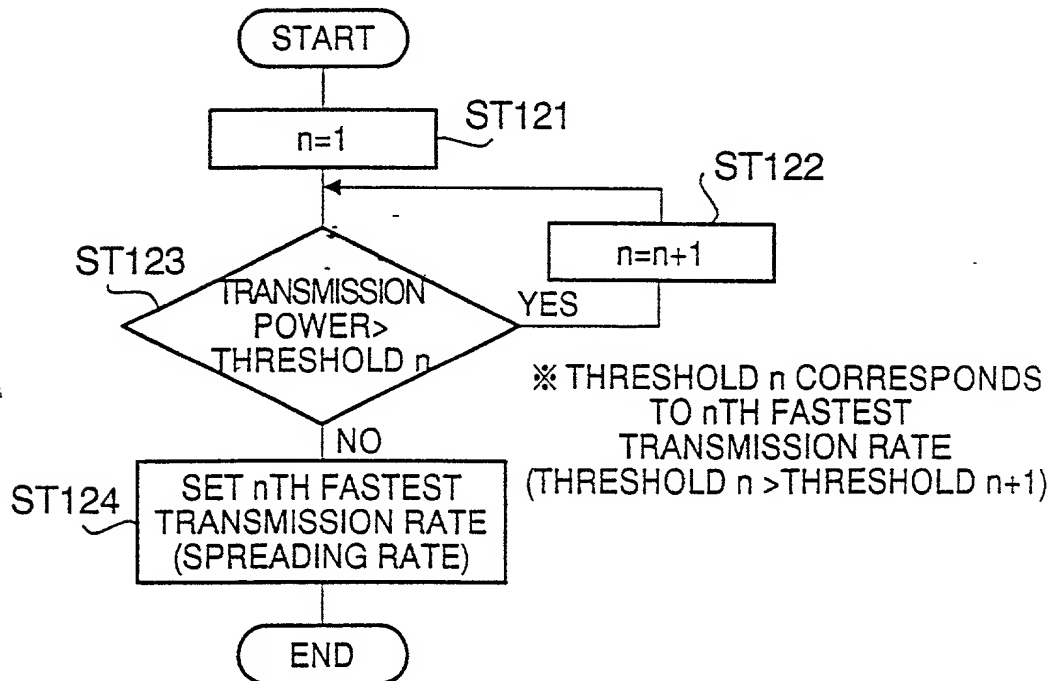


FIG. 27

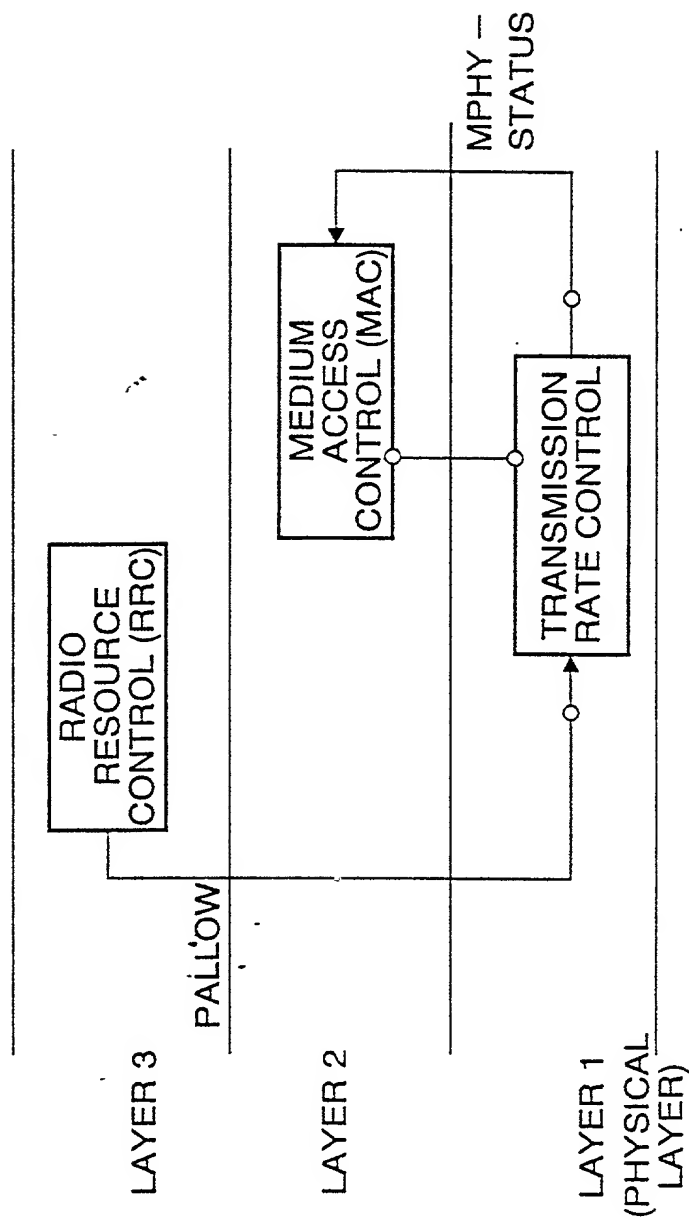


FIG. 28

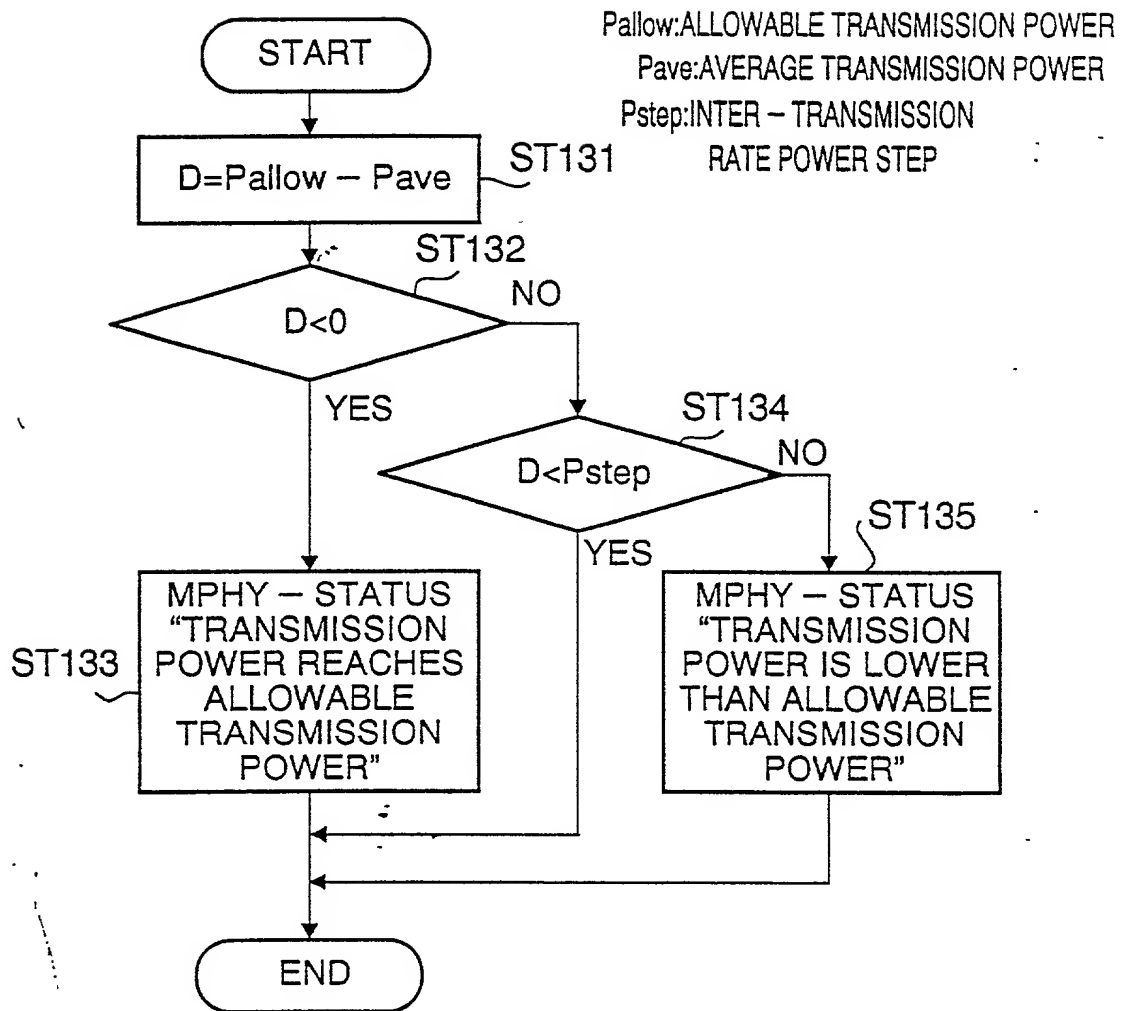


FIG. 29